

# User Manual – Unique-horn Sport Hoof Boot

## 1. Introduction

Thank you for purchasing the Unique-horn Sport Hoof Boot. This innovative hoof boot is designed for comfort, protection, and performance—suitable for daily recreational and sporting use.



Scan for user manuals  
in other languages


## 2. Safety instructions

- Read this manual completely before use.
- Do not use the hoof boot on damaged or sensitive hooves without advice from a hoof care professional.
- Allow your horse time to get accustomed to the hoof boot.

## 3. Package content

- ✓ 2 × Hoof boots
- ✓ 2 × Allen keys (for adjusting the side closure and gaiter connection)
- ✓ 4 × Spare screws
- ✓ 1 × User manual
- ✓ 1 × Storage box

Check immediately after purchase that all parts are included. If any parts are missing, please contact our customer service.

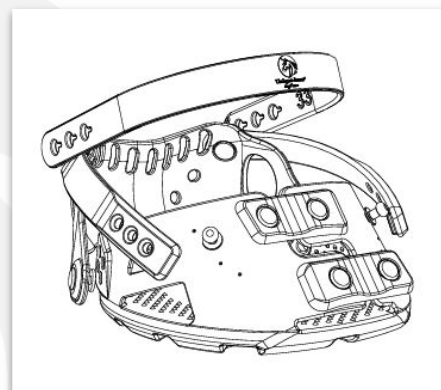


## 4. Usage

### 4.1 First use

- Ideally, have a hoof care professional determine the correct size and set the boots to the proper adjustments.
- Practice putting the boots on and taking them off without time pressure.
- Allow your horse to get used to the boots. Hoof boots need a break-in period. Start with approximately 15 minutes per day.

### 4.2 Putting the boots on

1. Ensure the hoof is clean and dry.
2. Open both side straps (A) and the pastern strap on one side (B).
3. The straps on the front (C) of the boot are **not** closures and should **not be opened**.
4. Fold the gaiter/back section (D) downward.
5. Slide the hoof into the boot and make sure the toe is positioned properly in the front of the boot.
6. Fold the gaiter back up so that the heel bulbs sit correctly inside the gaiter.
7. Close the side straps firmly but comfortably.
8. Close the pastern strap. The pastern strap should not be tight—there should be room for two fingers between the strap and the pastern.

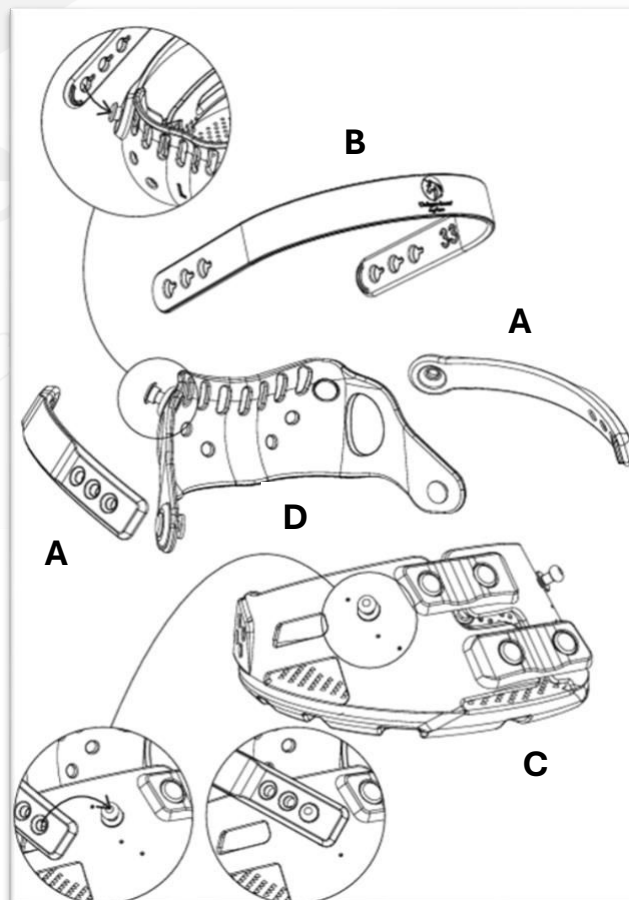


#### 4.3 Taking the boots off

- Open both side straps and the pastern strap on one side.
- Fold the gaiter/back section downward.
- Carefully remove the boot from back to front.

#### 5. Adjustment options

The following adjustments are possible:

- **Heel/heel bulb height adjustment:** Use the supplied Allen keys to loosen the screws and secure them in one of the four possible positions.
- **Side closure:** The side closure knob has four different adjustment settings. Under increased load, an additional supplied knob can be mounted on each side, allowing the side closure to be secured at two points.
- **Pastern strap:** Adjustable length for a perfect fit.

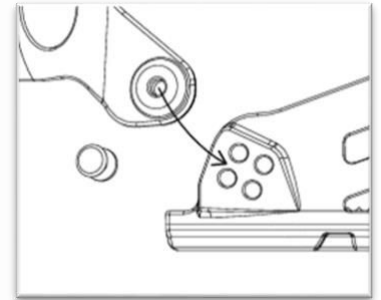

Consult your hoof care professional if you are unsure about the correct settings.

#### 6. Maintenance and cleaning

##### 6.1 Cleaning

- Rinse the boots with water after each use and/or use a soft brush to remove dirt.
- Allow to air-dry; avoid direct sunlight or heat sources.

##### 6.2 Inspection

- Check weekly for wear, loose parts, or damage.
- Replace worn closures or other parts in time.

##### 6.3 Storage

- Store in a dry place away from direct sunlight.

#### 7. FAQ's

**Question:** Can the boot be used as a medical boot for hoof problems?

**Answer:** This hoof boot is absolutely not intended for long-term use, for example in a paddock or as a medical boot. Such use can cause serious damage to the hoof and the horse as a whole.

#### 8. Contact and Service

Customer Service:

E-mail: [info@unique-horn.com](mailto:info@unique-horn.com)

Website: [www.unique-horn.com](http://www.unique-horn.com)



#### 9. Warranty Conditions

Our hoof boot comes with a 12-month warranty against manufacturing defects.

**Wear and tear caused by normal or abnormal use is not covered.**

For warranty claims, keep your proof of purchase and contact us by email or phone.